

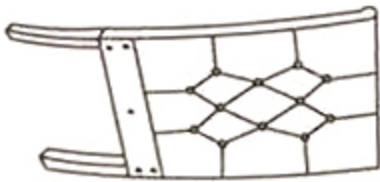



# ASSEMBLY INSTRUCTIONS

ITEM NO.: D-006

## PART LIST

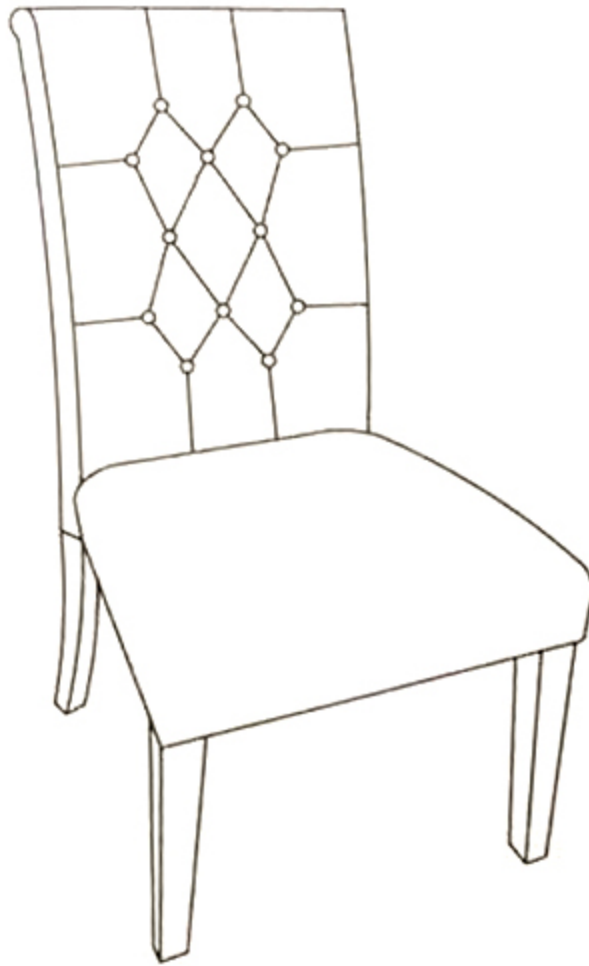

NO.	PICTURE	PARTS DESCRIPTION	Q'TY
<b>1</b>		SEAT FRAME	<b>1</b>
<b>2</b>		CHAIR BACK	<b>1</b>
<b>3</b>		FRONT LEG	<b>2</b>


# HARDWARE LIST



Ø5/16"-3-1/2"

Bolt

4x

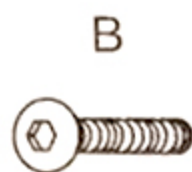

Ø5/16"-2-1/4"

Bolt

4x



Ø5/16"-1-3/4"

Bolt

1x



Ø5/16"-7/8"

Flat Washer

9x



Ø5/16"

Spring Washer

9x





Ø5/16"x2-1/4"

Allen Key

1x

NOTE: Straight Allen Key(F) is for use with a power drill.


## STEP 1

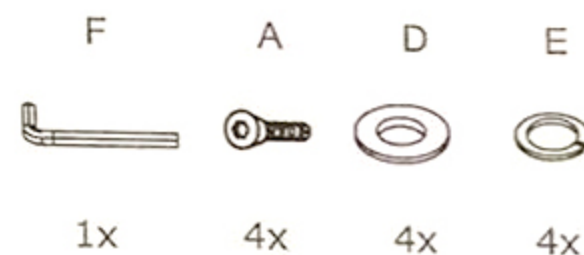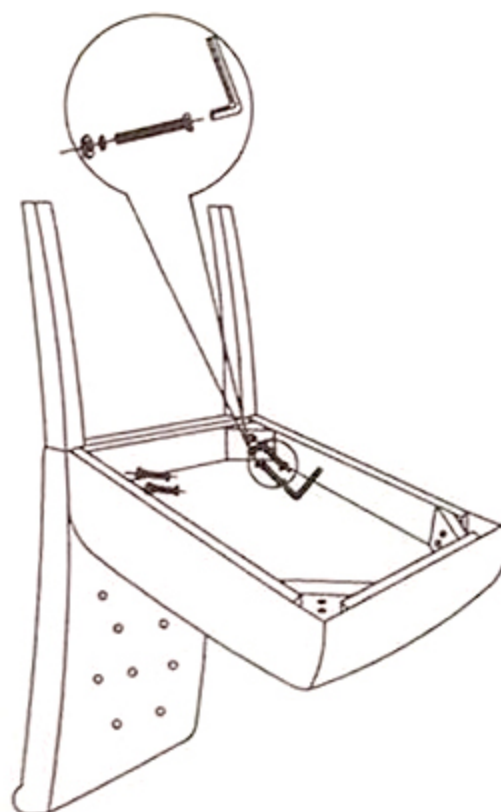

1. Firstly, put the spring washer(E) and flat washer (D) onto bolt(C).
  2. Then insert the bolt(B) into the hole with Allen Key(F), but do not tighten.
- Note: tighten the bolts at last step.




## STEP 2

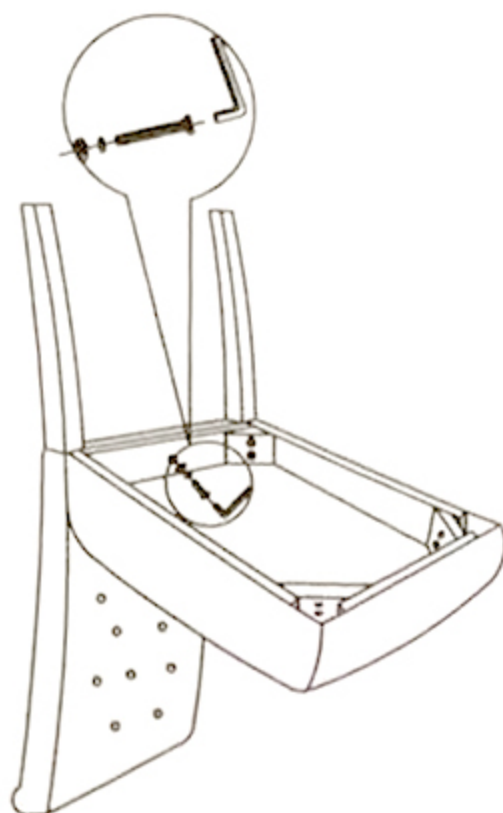

F	C	D	E
1x	1x	1x	1x

Repeat the same way as Step 2 to attach the rest four bolts(C) to the chair back.


## STEP 3

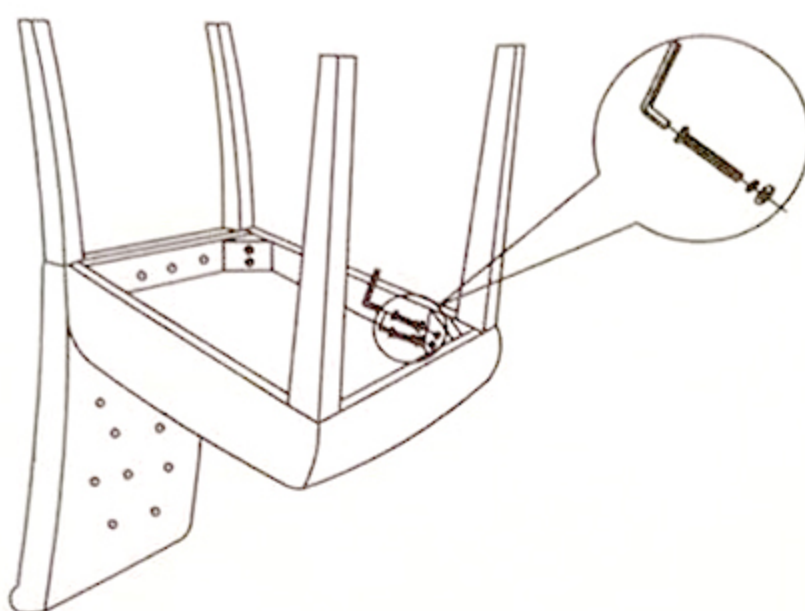

F	B	D	E
1x	4x	4x	4x

Insert the front legs (3) to the seat frame by using spring washer(E) and flat washer (D), bolt(B), with allen wrench (F).

## STEP 4

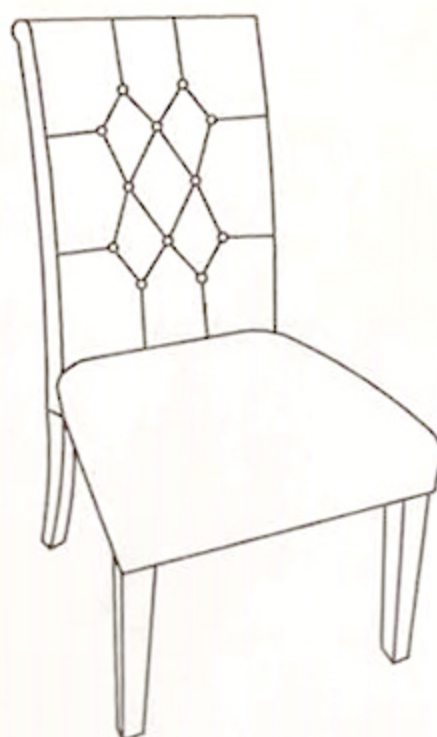

Check that all parts are secured. Turn the chair upside on a level place to make sure all the legs are level, then tighten all the parts, including the bolts and screw. Assembly completes.