

1	Beschlag		1
3	730**	296	2
2	310**	296**	2
4	280**	296	4
5	730**	296	2

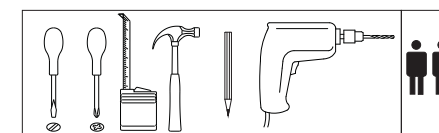
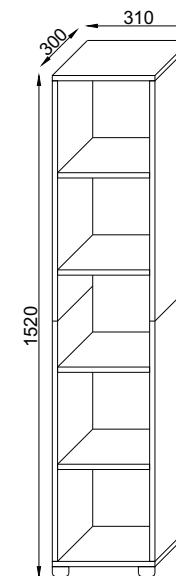
VCM.

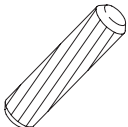
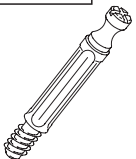

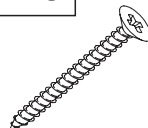

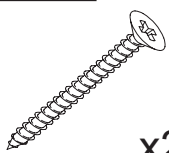
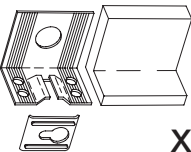
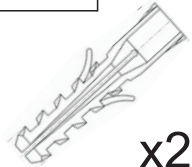
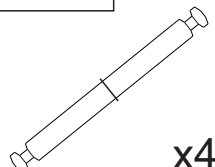
seit 30 Jahren
service@vcm-gruppe.de


Aufbauanleitung

Artikel

Benos (5-Fach)



1.14  x25	1.17  x21	1.16  x13	1.5 3,5x16mm  x4
1.11  x4	1.49 3,5x30mm  x4	1.30  x21	1.33 4x50mm  x2
1.18  x2	1.36 8x40mm  x2	1.56 67mm  x4	

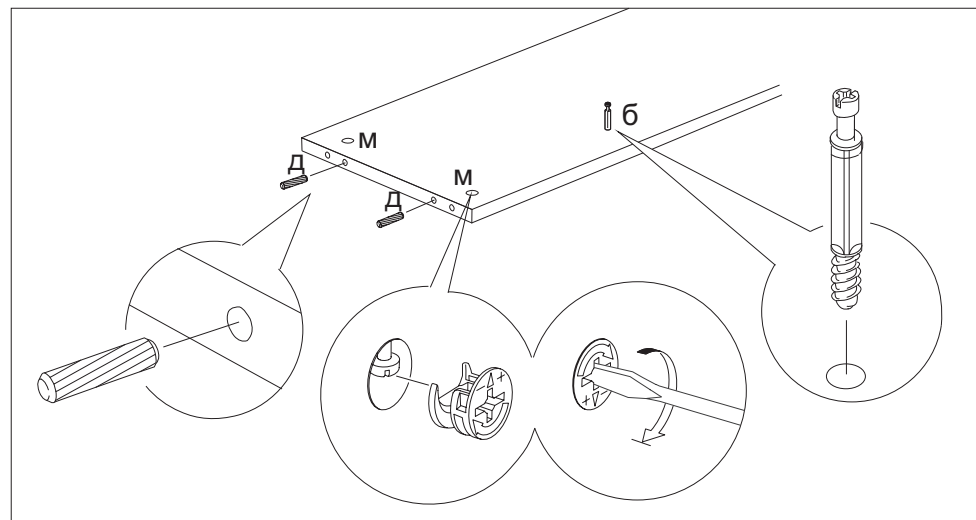

Achtung!!!
Unbedingt Wandbefestigung (Teile 1.18, 1.33, 1.36) verwenden!

