

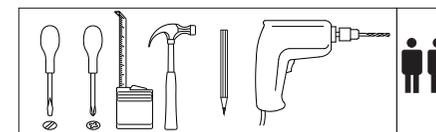
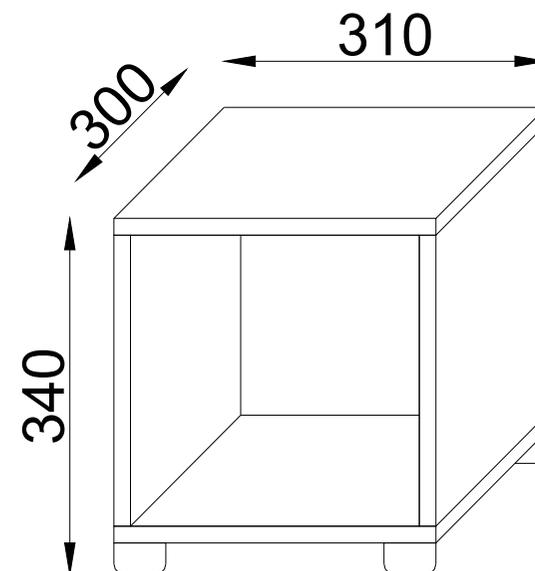
1	Beschlag		1
2	310**	296**	2
3	280**	296	2

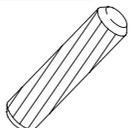

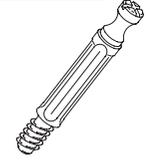



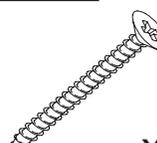
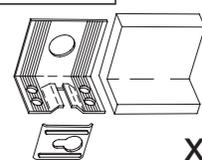
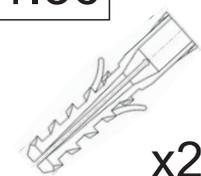
# VCM.

seit 30 Jahren  
 service@vcm-gruppe.de

## Aufbauanleitung

Artikel      Badregal Benos



<b>1.14</b>  x9	<b>1.17</b>  x4	<b>1.16</b>  x4	<b>1.5</b> 3,5x16mm  x4
<b>1.11</b>  x4	<b>1.12</b> 4x20mm  x4	<b>1.30</b>  x4	<b>1.33</b> 4x50mm  x2
<b>1.18</b>  x2	<b>1.36</b> 8x40mm  x2		

