

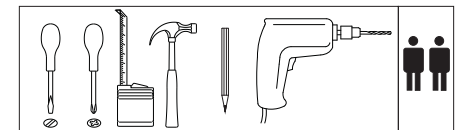
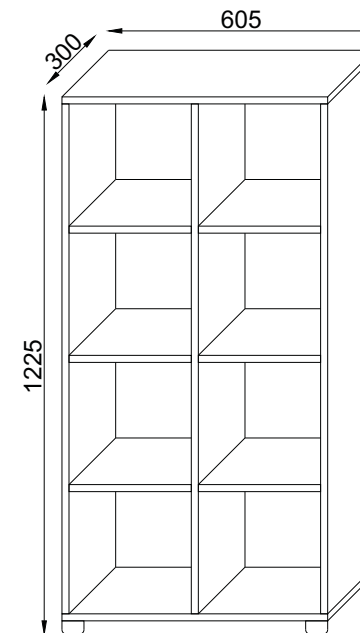
|   |          |       |   |
|---|----------|-------|---|
| 1 | Beschlag |       | 1 |
| 3 | 1165**   | 296   | 2 |
| 2 | 605**    | 296** | 2 |
| 4 | 280**    | 296   | 6 |
| 5 | 1165**   | 296   | 1 |

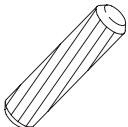
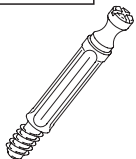
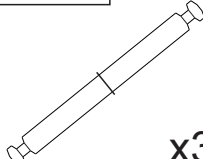


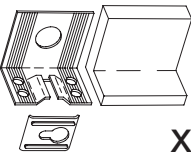
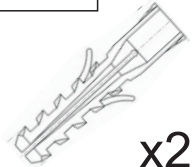
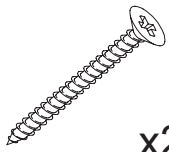
# VCM.


*seit 30 Jahren*  
 service@vcm-gruppe.de

## Aufbauanleitung

Artikel Benos (2x4 Fach)



|                                                                                                  |                                                                                                        |                                                                                                  |                                                                                                         |
|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| 1.14<br><br>x38 | 1.17<br><br>x19       | 1.16<br><br>x13 | 1.31 84mm<br><br>x3   |
| 1.11<br><br>x4  | 1.12 4x20mm<br><br>x4 | 1.30<br><br>x19 | 1.5 3,5x16mm<br><br>x4 |
| 1.18<br><br>x2  | 1.36 8x40mm<br><br>x2 |                                                                                                  | 1.33 4x50mm<br><br>x2  |

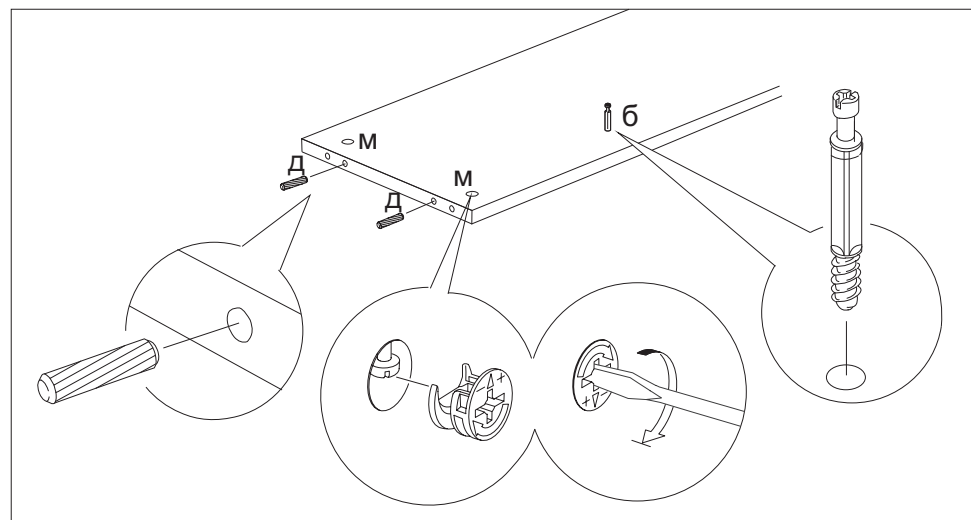

**Achtung!!!**  
Unbedingt Wandbefestigung (Teile 1.18, 1.33, 1.36) verwenden!

